




BioClean-D™

Disposable Garments

Nitritex Ltd. is pleased to present the **BioClean-D™** disposable garment range. These garments have been carefully designed and researched to provide the wearer with both superior comfort and maximum protection.

The garments are manufactured from a revolutionary new **Clean-Tough™** fabric which is lightweight, hard-wearing and compatible for use in ISO Class 4 cleanrooms.

All **BioClean-D™** products are individually packed in a sealed bag. Our special print encapsulation process ensures bags can be wiped down with cleaning or sterilising fluids without fear of cross contamination. Available as sterile or non-sterile garments.

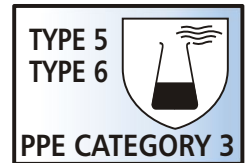

CE
0120



“Superior Comfort, Maximum Protection”

NITRITEX ASIA PTE LTD
11 Keng Cheow Street
#03-09 Riverside Piazza
Singapore 059608
Republic of Singapore
Tel: +65 6536 9123
Fax: +65 6438 5159
Email: nitritex@pacific.net.sg

NITRITEX CANADA LTD
7030 Woodbine Avenue
Suite 500, Markham
Ontario L3R 6G2
Canada
Tel: +1 (905) 946 9539
Fax: +1 (905) 946 8584
Email: info@nitritexcanada.com

NITRITEX LTD
Minton Enterprise Park
Oaks Drive, Newmarket
Suffolk, CB8 7YY
United Kingdom
Tel: +44 (0) 1638 663338
Fax: +44 (0) 1638 668890
Email: sales@nitritex.com





BioClean-D™

Disposable Garments

BioClean-D™ Coverall with Hood

A very comfortable coverall giving full flexibility to the wearer with maximum protection.



Design: Zip front, elasticated hood, back, cuffs & ankles

The hood has been designed to be used with or without a facemask.

The hood, cuffs and ankles have an elasticated finish which provides a protective seal.

The zip is fitted with a double layer cover for extra protection.

The elasticated back ensures a close and comfortable fit.

Available in: XS S M L XL XXL

BioClean-D™ Coverall with Collar

A coverall designed for use in areas where a hood is not required.



Design: Zip front, collar, elasticated back, cuffs & ankles

The zip is fitted with a double layer cover for extra protection.

The elasticated back ensures a close and comfortable fit.

Cuffs and ankles have an elasticated closure which provides a protective seal.

Available in: XS S M L XL XXL

BioClean-D™ Hood

Where separate head cover is required.

Design: Elasticated face opening

One size only

Shaped to provide a good fit on the head thus providing maximum comfort.

Elasticated face opening to provide comfortable yet protective seal.




BioClean-D™



Disposable Garments

BioClean-D™ Lab Coat

This lightweight unisex coat has a very smart appearance and is designed for maximum comfort.

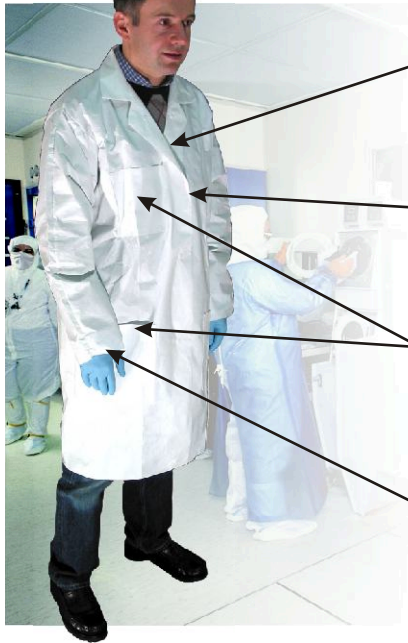

Design: Press stud fastening, open cuffs & rear vent.

Extremely strong fastening studs ensure the garment does not open accidentally.

Very strong seams ensure the garment retains its shape and fit.

Two hip pockets and chest pocket for convenient storage.

Open cuffs and rear vent for comfort during use.

Available in: S M L XL XXL

BioClean-D™ Sleeve Covers

Lightweight & comfortable where lower & upper arm protection is required.



Design: Elasticated arms & cuffs.

One size
16" (400mm)

Elasticated openings allow easy donning and a comfortable yet protective seal.

Provides full coverage and protection from wrist to upper arm.

BioClean-D™ Overboots

Lightweight and comfortable to wear.

Design: Elasticated top and non-slip sole.

One size
16"
(400mm)

Elasticated top for a comfortable yet protective seal.

Non-slip sole to prevent accidental falls






BioClean-D™

Disposable Garments Test Data

BioClean-D™ Garments

Single use garments for your comfort and protection. Carefully researched, designed and produced under strict quality control BioClean-D™ garments are guaranteed to reach you in perfect condition. If this is not the case, please return the garment to your distributor for a replacement.

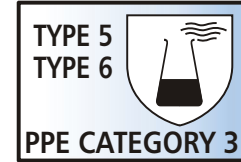

CE
0120

TEST RESULTS:

| Physical Property | Tests Test Method | Class or Result |
|---|---------------------------|-----------------|
| Abrasion Resistance | EN 530 Method 2 | 1 |
| Trapezoidal Tear Resistance Machine Dir./Cross Dir. | ISO 9073-4 | 2 |
| Flex Cracking Resistance | ISO 7854 Method B | 4 |
| Seam Strength | ISO 13935-2 | 3 |
| Puncture Resistance | EN 863 | 2 |
| Resistance to Ignition | EN 1146/EN13274-4 meth. 3 | xxx |
| Surface Resistivity | EN 1149-1 | xxx |
| Radioactive Contamination | prEN 1073-2 | xxx |
| Blocking Resistance | ISO 5978 | 2 |
| Bursting Resistance | ISO 1398-1 | 1 |
| Particle Shedding | Helmke Drum | 1 |

Whole Suit Performance (Coverall with Hood)

| | | |
|------------------------------------|----------------------|------|
| Reduced Spray Test (Type 6) | pr EN 13034 & EN 468 | Pass |
| Whole Suit Inward Leakage (Type 5) | pr EN/ISO 13982-1 | Pass |

Resistance to Penetration by Liquids EN 368 Repellency Index Penetration Index

| | | |
|------------------------|---|---|
| Sulphuric Acid (30%) | 3 | 3 |
| Sodium Hydroxide (10%) | 3 | 3 |
| n-Heptane | 1 | 3 |
| Isopropanol | 2 | 3 |

| COVERALLS & COATS | | Re-order Codes (if sterile required preface S-) | | | |
|-------------------|---------|---|-----------|-------------|----------|
| SIZE | CHEST | | COVERALL | COVERALL | LAB |
| | mm | ins | With Hood | With Collar | COAT |
| XS | 76-84 | (30"-33") | BDCH XS | BDCC XS | - |
| S | 84-92 | (33"-36") | BDCH S | BDCC S | BDLC S |
| M | 92-100 | (36"-39") | BDCH M | BDCC M | BDLC M |
| L | 100-108 | (39"-42") | BDCH L | BDCC L | BDLC L |
| XL | 108-116 | (42"-45") | BDCH XL | BDCC XL | BDLC XL |
| XXL | 116-124 | (45"-48") | BDCH XXL | BDCC XXL | BDLC XXL |

| | | |
|----------------------|----------------------------|------|
| SLEEVE COVERS | Universal Size 16" (400mm) | BDSC |
| OVERBOOTS | Universal Size 16" (400mm) | BDOB |
| HOOD | Universal Size | BDHD |

For more information about the BioClean-D™ garment range please contact your Nitrivetex distributor.

NITRITEX ASIA PTE LTD
 11 Keng Cheow Street
 #03-09 Riverside Piazza
 Singapore 059608
 Republic of Singapore
 Tel: +65 6536 9123
 Fax: +65 6438 5159
 Email: nitritex@pacific.net.sg

NITRITEX CANADA LTD
 7030 Woodbine Avenue
 Suite 500, Markham
 Ontario L3R 6G2
 Canada
 Tel: +1 (905) 946 9539
 Fax: +1 (905) 946 8584
 Email: info@nitritexcanada.com

NITRITEX LTD
 Minton Enterprise Park
 Oaks Drive, Newmarket
 Suffolk, CB8 7YY
 United Kingdom
 Tel: +44 (0) 1638 663338
 Fax: +44 (0) 1638 668890
 Email: sales@nitritex.com

